

# Anti-APC MicroBeads lyophilized

Order no. 130-097-143

#### **Contents**

- 1. Description
  - 1.1 Principle of the MACS® Separation
  - 1.2 Background information
  - 1.3 Applications
  - 1.4 Reagent and instrument requirements
- 2. Protocol
  - 2.1 Reconstitution of MicroBeads
  - 2.2 Sample preparation
  - 2.3 Magnetic labeling
  - 2.4 Magnetic separation
- 3. Example of a separation using Anti-APC MicroBeads

# 1. Description

Components 1 vial Anti-APC MicroBeads, lyophilized:

MicroBeads conjugated to monoclonal mouse anti-APC antibodies (isotype: mouse IgG1).

2 mL Reconstitution Buffer

Capacity For 10° total cells.

**Product format** Lyophilized MicroBeads.

Reconstitution Buffer contains stabilizer and

0.05% sodium azide.

Storage Store protected from light at 2-8 °C. Do not

freeze. The expiration date is indicated on the vial label. For information about reconstitution of the lyophilized MicroBeads and storage after

reconstitution refer to chapter 2.1.

# 1.1 Principle of the MACS® Separation

First, the cells are stained with an allophycocyanin (APC)-conjugated primary antibody or ligand. Subsequently, the cells are magnetically labeled with Anti-APC MicroBeads. Then, the cell suspension is loaded onto a MACS® Column, which is placed in the magnetic field of a MACS Separator. The magnetically labeled cells are retained within the column. The unlabeled cells run through; this cell fraction is thus depleted of APC-labeled cells. After removing the column from the magnetic field, the magnetically retained cells can be eluted as the positively selected cell fraction.

## 1.2 Background information

Anti-APC MicroBeads have been developed for the magnetic separation of cells according to surface markers labeled with APC-conjugated antibodies, peptides, or ligands. Cells are labeled, for example, using an APC-conjugated primary antibody of choice and MACS Anti-APC MicroBeads.

#### 1.3 Applications

- Positive selection or depletion of cells labeled with APCconjugated antibodies.
- Positive selection or depletion of cells labeled with APCconjugated peptides or ligands.

#### 1.4 Reagent and instrument requirements

- Buffer: Prepare a solution containing phosphate-buffered saline (PBS), pH 7.2, 0.5% bovine serum albumin (BSA), and 2 mM EDTA by diluting MACS BSA Stock Solution (#130-091-376) 1:20 with autoMACS\* Rinsing Solution (#130-091-222). Keep buffer cold (2–8 °C). Degas buffer before use, as air bubbles could block the column.
  - ▲ Note: EDTA can be replaced by other supplements such as anticoagulant citrate dextrose formula-A (ACD-A) or citrate phosphate dextrose (CPD). BSA can be replaced by other proteins such as human serum albumin, human serum, or fetal bovine serum (FBS). Buffers or media containing Ca²+ or Mg²+ are not recommended for use.
- MACS Columns and MACS Separators: Cells magnetically labeled with Anti-APC MicroBeads can be enriched by using MS, LS, or XS Columns or depleted with the use of LD, CS, or D Columns. Cells which strongly express the APC-labeled antigen can also be depleted using MS, LS, or XS Columns. Positive selection or depletion can also be performed by using the autoMACS or the autoMACS Pro Separator.

Column	of labeled cells	of total cells	Separator
Positive selection			
MS	10 <sup>7</sup>	2×10 <sup>8</sup>	MiniMACS, OctoMACS, VarioMACS, SuperMACS II
LS	10 <sup>8</sup>	2×10 <sup>9</sup>	MidiMACS, QuadroMACS, VarioMACS, SuperMACS II
XS	10 <sup>9</sup>	2×10 <sup>10</sup>	SuperMACS II
Depletion			
LD	10 <sup>8</sup>	5×10 <sup>8</sup>	MidiMACS, QuadroMACS, VarioMACS, SuperMACS II
CS	2×10 <sup>8</sup>		VarioMACS, SuperMACS II
D	10°		SuperMACS II
Positive selection or depletion			

▲ Note: Column adapters are required to insert certain columns into the VarioMACS™ or SuperMACS™ II Separators. For details refer to the respective MACS Separator data sheet.

autoMACS Pro, autoMACS

4×109

- APC-conjugated antibody, peptide, or ligand.
- (Optional) Propidium Iodide Solution (# 130-093-233) or 7-AAD for flow cytometric exclusion of dead cells.
- (Optional) Dead Cell Removal Kit (# 130-090-101) for the depletion of dead cells.

autoMACS 2×10<sup>8</sup>

• (Optional) Pre-Separation Filters, 30 μm (# 130-041-407) to remove cell clumps.

## 2. Protocol

#### 2.1 Reconstitution of MicroBeads

Reconstitute the lyophilized MicroBeads by adding all Reconstitution Buffer to the vial. Mix by pipetting up and down until resuspended. After reconstitution the MicroBeads are stable for 9 months at 2–8 °C. Write the new expiration date after reconstitution on the vial label.

#### 2.2 Sample preparation

When working with anticoagulated peripheral blood or buffy coat, peripheral blood mononuclear cells (PBMCs) should be isolated by density gradient centrifugation, for example, using Ficoll-Paque™.

▲ Note: To remove platelets after density gradient separation, resuspend cell pellet in buffer and centrifuge at 200×g for 10−15 minutes at 20 °C. Carefully aspirate supernatant. Repeat washing step.

When working with tissues or lysed blood, prepare a single-cell suspension using standard methods.

When working with lymphoid organs, non-lymphoid tissues, or peripheral blood, prepare a single-cell suspension using manual methods or the gentleMACS™ Dissociator.

For details refer to the protocols section at www.miltenyibiotec.com/protocols.

▲ Dead cells may bind non-specifically to MACS MicroBeads. To remove dead cells, we recommend using density gradient centrifugation or the Dead Cell Removal Kit (# 130-090-101).



# 2.3 Magnetic labeling

- ▲ Work fast, keep cells cold, and use pre-cooled solutions. This will prevent capping of antibodies on the cell surface and non-specific cell labeling.
- ▲ Volumes for magnetic labeling given below are for up to  $10^7$  total cells. When working with fewer than  $10^7$  cells, use the same volumes as indicated. When working with higher cell numbers, scale up all reagent volumes and total volumes accordingly (e.g. for  $2 \times 10^7$  total cells, use twice the volume of all indicated reagent volumes and total volumes).
- ▲ For optimal performance it is important to obtain a single-cell suspension before magnetic labeling. Pass cells through 30  $\mu$ m nylon mesh (Pre-Separation Filters, 30  $\mu$ m # 130-041-407) to remove cell clumps which may clog the column. Moisten filter with buffer before use.
- ▲ The recommended incubation temperature is 2–8 °C. Higher temperatures and/or longer incubation times may lead to non-specific cell labeling. Working on ice may require increased incubation times.
- ▲ Primary APC-conjugated antibody should be titrated to determine the staining dilution for optimal labeling intensity of the target cells and to avoid background labeling.
- ▲ The optimal relative centrifugal force (RCF) and centrifugation time may be different depending on the cell sample.
- 1. Determine cell number.

- 2. Centrifuge cell suspension at 300×g for 10 minutes. Aspirate supernatant completely.
- 3. Resuspend cell pellet and label with the primary APC-conjugated antibody at time and titer according to the manufacturer's recommendations. For MACS APC-conjugated antibodies resuspend  $10^7$  total cells in  $100~\mu L$  of buffer and add  $10~\mu L$  of the APC-conjugated antibody.
- 4. Mix well and incubate for 10 minutes in the refrigerator (2–8 °C) or according to the manufacturer's recommendations.
- 5. Wash cells by adding 1–2 mL of buffer per 10<sup>7</sup> cells and centrifuge at 300×g for 10 minutes. Aspirate supernatant completely.
- 6. (Optional) Repeat step 5.
- 7. Resuspend cell pellet in 80  $\mu$ L of buffer per 10<sup>7</sup> total cells.
- 8. Add 20 μL of Anti-APC MicroBeads per 10<sup>7</sup> total cells.
- Mix well and incubate for 15 minutes in the refrigerator (2–8 °C).
- 10. Wash cells by adding  $1-2\,\mathrm{mL}$  of buffer per  $10^7$  cells and centrifuge at  $300\times\mathrm{g}$  for 10 minutes. Aspirate supernatant completely.
- 11. Resuspend up to 10<sup>8</sup> cells in 500 μL of buffer.
  - ▲ Note: For higher cell numbers, scale up buffer volume accordingly.
  - $\blacktriangle$  Note: For depletion with LD Columns, resuspend up to  $1.25\times10^8$  cells in  $500~\mu L$  of buffer.
- 12. Proceed to magnetic separation (2.3).



# 2.4 Magnetic separation

- ▲ Choose an appropriate MACS Column and MACS Separator according to the number of total cells and the number of magnetically labeled cells. For details refer to the table in section
- ▲ Always wait until the column reservoir is empty before proceeding to the next step.

# Magnetic separation with MS or LS Columns

- Place column in the magnetic field of a suitable MACS Separator. For details refer to the respective MACS Column data sheet.
- Prepare column by rinsing with the appropriate amount of buffer:

MS:  $500 \,\mu L$  LS:  $3 \,m L$ 

- Apply cell suspension onto the column. Collect flow-through containing unlabeled cells.
- 4. Wash column with the appropriate amount of buffer. Collect unlabeled cells that pass through and combine with the flow-through from step 3.

MS: 3×500 μL LS: 3×3 mL

- $\blacksquare$  Note: Perform washing steps by adding buffer aliquots only when the column reservoir is empty.
- Remove column from the separator and place it on a suitable collection tube.

6. Pipette the appropriate amount of buffer onto the column. Immediately flush out the magnetically labeled cells by firmly pushing the plunger into the column.

MS: 1 mL LS: 5 mL

7. (Optional) To increase the purity of the magnetically labeled cells, the eluted fraction can be enriched over a second MS or LS Column. Repeat the magnetic separation procedure as described in steps 1 to 6 by using a new column.

#### Magnetic separation with XS Columns

For instructions on the column assembly and the separation refer to the XS Column data sheet.

#### **Depletion with LD Columns**

- Place LD Column in the magnetic field of a suitable MACS Separator. For details refer to the LD Column data sheet.
- 2. Prepare column by rinsing with 2 mL of buffer.
- 3. Apply cell suspension onto the column.
- 4. Collect unlabeled cells that pass through and wash column with 2×1 mL of buffer. Collect total flow-through; this is the unlabeled cell fraction. Perform washing steps by adding buffer two times. Only add new buffer when the column reservoir is empty.

#### **Depletion with CS Columns**

- Assemble CS Column and place it in the magnetic field of a suitable MACS Separator. For details refer to the CS Column data sheet.
- Prepare column by filling and rinsing with 60 mL of buffer. Attach a 22G flow resistor to the 3-way stopcock of the assembled column. For details refer to the CS Column data sheet.
- 3. Apply cell suspension onto the column.
- 4. Collect unlabeled cells that pass through and wash column with 30 mL buffer from the top. Collect total flow-through; this is the unlabeled cell fraction.

# Depletion with D Columns

For instructions on column assembly and separation refer to the D Column data sheet.

# Magnetic separation with the autoMACS $^{\circ}$ Pro Separator or the autoMACS $^{\circ}$ Separator

- ▲ Refer to the respective user manual for instructions on how to use the autoMACS® Pro Separator or the autoMACS Separator.
- ▲ Buffers used for operating the autoMACS Pro Separator or the autoMACS Separator should have a temperature of  $\geq$ 10 °C.
- ▲ Program choice depends on the isolation strategy, the strength of magnetic labeling, and the frequency of magnetically labeled cells. For details refer to the section describing the cell separation programs in the respective user manual.

# Magnetic separation with the autoMACS® Pro Separator


- 1. Prepare and prime the instrument.
- 2. Apply tube containing the sample and provide tubes for collecting the labeled and unlabeled cell fractions. Place sample tube in row A of the tube rack and the fraction collection tubes in rows B and C.
- 3. Choose an appropriate program.


#### Magnetic separation with the autoMACS® Separator

- 1. Prepare and prime the instrument.
- Apply tube containing the sample and provide tubes for collecting the labeled and unlabeled cell fractions. Place sample tube at the uptake port and the fraction collection tubes at port neg1 and [PORT].
- 3. Choose an appropriate program.

# 3. Example of a separation using Anti-APC MicroBeads

Anti-APC MicroBeads were reconstituted as described in 2.1. CD19<sup>+</sup> cells were isolated from human PBMCs using CD19-APC (# 130-091-248), Anti-APC MicroBeads, one MS Column, and a MiniMACS™ Separator. Cells were analyzed using the MACSQuant® Analyzer. Cell debris and dead cells were excluded from the analysis based on scatter signals and propidium iodide fluorescence.

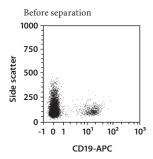

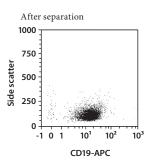

All protocols and data sheets are available at www.miltenyibiotec.com.

# Warnings

Reagents contain sodium azide. Under acidic conditions sodium azide yields hydrazoic acid, which is extremely toxic. Azide compounds should be diluted with running water before discarding. These precautions are recommended to avoid deposits in plumbing where explosive conditions may develop.

#### Warranty

The products sold hereunder are warranted only to be free from defects in workmanship and material at the time of delivery to the customer. Miltenyi Biotec GmbH makes no warranty or representation, either expressed or implied, with respect to the fitness of a product for a particular purpose. There are no warranties, expressed or implied, which extend beyond the technical specifications of the products. Miltenyi Biotec GmbH's liability is limited to either replacement of the products or refund of the purchase price. Miltenyi Biotec GmbH is not liable for any property damage, personal injury or economic loss caused by the product.

autoMACS, MACS, and MACSQuant are registered trademarks and gentleMACS, MidiMACS, MiniMACS, OctoMACS, QuadroMACS, SuperMACS, and VarioMACS are trademarks of Miltenyi Biotec GmbH.

Ficoll-Paque is a trademark of GE Healthcare companies.

Copyright © 2012 Miltenyi Biotec GmbH. All rights reserved.